

Puma Quick Start List

The numbers in parentheses () refer to pages in the **Puma User Guide**, published **30 September 2004**, part number **070-0102-13**.


Installation

1. If the Pumas were purchased with options, it may be easier to install them before a wall is built.
 - a Video Input Module (VIM) option (16)
 - b Big Picture key option (18)
 - c Color Plus™ option (20)
2. Arrange the bottom row of Pumas and assure that the row is straight (22).
3. Check for keystoneing in the picture (26).
4. Stack the next row of Pumas on the first row. Again check that the wall is straight. Bolt the units together (22).
5. Bolt the screen brackets on the front as the wall goes up (22).
6. If the wall is tilted, attach the cubes to a structural part of the building as you go up (24).
7. When the wall is built, install the chimney covers on the top row only (24).
8. When wall is built, connect video (28), RS232 control cabling (30), and power.
9. Remove the lens covers.
10. Install all the screens (32).
11. Remove the protective film from the screens (32). (Acrylic screens to do not have this film.)

Configuration

1. Check the LCD alignment on each Puma (40).
2. Adjust color balance (44).
3. Adjust Levels for analog computer sources (46).
4. Check Frequency and Phase for computer sources (48)
5. Adjust to video sources (52).
6. Set up the video on the whole wall (54 & 56).
7. Adjust zoom and position for a video wall (58).
8. Save your work in memory (60).

Cut out and save this card.



clarity		Puma XP, UXP On-Screen Codes													
Condition	Priority	Each block represents 0.2 seconds													
Interlock open	1	R	R	R											
Any Fan stopped	2	R		Amber											
350 V missing	3	R	R		Amber										
Temperature over limit	4	R		Amber											
Both lamps failed	5	R	R												
Lamps off (wait, auto off)	6	R	R			Amber			Amber						
Wait (lamps are cooling)	7	R		Amber		Amber									
Temperature over limit	8		Amber			R		R							
One lamp failed	9		Amber			R			Amber						
Temperature near limit	10		Amber			R									
Lamps off (lamp saver)	11		Amber				Amber			R					
Lamps off (ready)	12		Amber				Amber								
Lamps on, no alarms	13		Amber on continuously												

Starts with Red. Lamps turn off. Must cycle AC.

Starts with Amber. Lamps stay on.



Customer Service

email Service@ClarityVisual.com
tech support +1 503 570 4634
tech fax +1 503 570 4657

tech help on web: www.ClarityVisual.com
LOGIN button, then blue LOGIN NOW
Name: tech password: help

Clarity Visual Systems®
27350 SW 95th Avenue, Suite 3038
Wilsonville, OR 97070-7708
main phone +1 503 570 0700
main fax +1 503 682 9441
www.ClarityVisual.com